

1. Know the vehicle

Smart key



- 1 Lock vehicle
- 2 Open the liftgate
- 3 Unlock vehicle
- 4 Power on the remote control and turn on the air conditioner
- 5 Indicator lamps

Unlock and lock vehicle


Method 1: Intelligent active unlock/lock

- ◆ Automatically unlock when approaching the vehicle with the smart key.
- ◆ Automatically lock when leaving the vehicle with the smart key.

Method 2: Unlock and lock with smart key



Method 3: Unlock and lock the vehicle with the micro switch

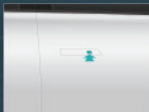

- ◆ Approach the vehicle with the smart key, and the vehicle will automatically unlock/lock when pressing the micro switch.

Open the liftgate

Method 1: Unlock with the micro switch




Method 2: Unlock by pressing and holding button on the smart key

*: Applicable to some models


2. AION APP

1. Download the AION APP (if available) from the mobile app store and register


2. Bind the vehicle

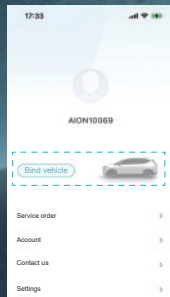

3. Owner identification

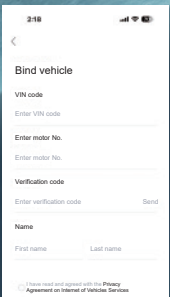


4. Set PIN Code

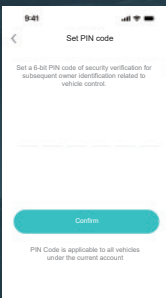


- ◆ Set PIN Code for subsequent owner identification related to vehicle control.

5. Vehicle control

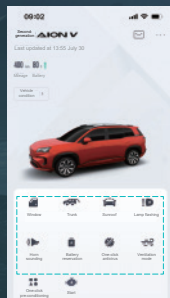


- ◆ After binding and authentication, multiple vehicle control functions are supported (the specific functions are subject to the actual vehicle).

7. A/C settings

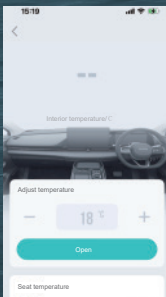

8. Charging management

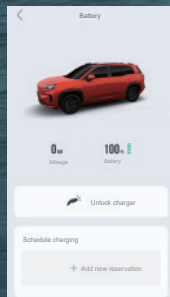

- ◆ The interface is for reference only. The actual vehicle shall prevail.

3. Driving mode

Introduction to driving modes

Driving mode	Description
Comfort	The most suitable combination of steering effort, acceleration response, and braking response for daily driving
Sports	Agile performance response, with steering effort, acceleration response, and braking response more focused on driving pleasure
Energy saving	Integrated pedal mode, controlling vehicle acceleration and deceleration through the accelerator pedal. This mode has a high energy recovery rate and can significantly improve vehicle range, suitable for urban conditions
Extreme energy saving	When the extreme energy-saving mode is activated, the vehicle operates with the lowest energy consumption, and vehicle power and air conditioning are limited

Switch driving modes



- ◆ When the battery is low, activate the Extreme Energy Saving mode via the central console display.

- ◆ Enter the main interface of the central console display to switch between Comfort, Sports, Energy Saving, and Custom driving modes.

*: Applicable to some models

4. Intelligent driving assistance

Set ACC

After the ACC is turned on, the system will detect the information of vehicle ahead, and activate cruise control (no vehicle ahead) or automatically follow the vehicle ahead (if any)



- Setting steps:
1. Set the gear lever to "D" position, and move the lever toward "D" position once to activate the ACC
 2. Adjust the cruise speed by scrolling the steering wheel roller up or down
 3. Adjust the following distance by moving the steering wheel roller left or right

Set ICA

ICA can automatically activate following vehicle ahead during cruise control and keep the vehicle traveling in the middle of the lane




- Setting steps:
- Set the gear lever to "D" position, and move the lever toward "D" position twice to activate the ICA

- ◆ Only some intelligent driving functions are listed. Please refer to the *Owner's Manual* for other intelligent driving functions.
- ◆ Intelligent driving functions can only assist the driver in safe driving and are not applicable in all cases.
- ◆ The driver should always pay attention to the vehicle condition and driving environment, and cannot completely rely on the intelligent driving functions. The interface is for reference only, and the actual display shall prevail.
- *: Applicable to some models

5. Vehicle charging

AC charging and DC charging

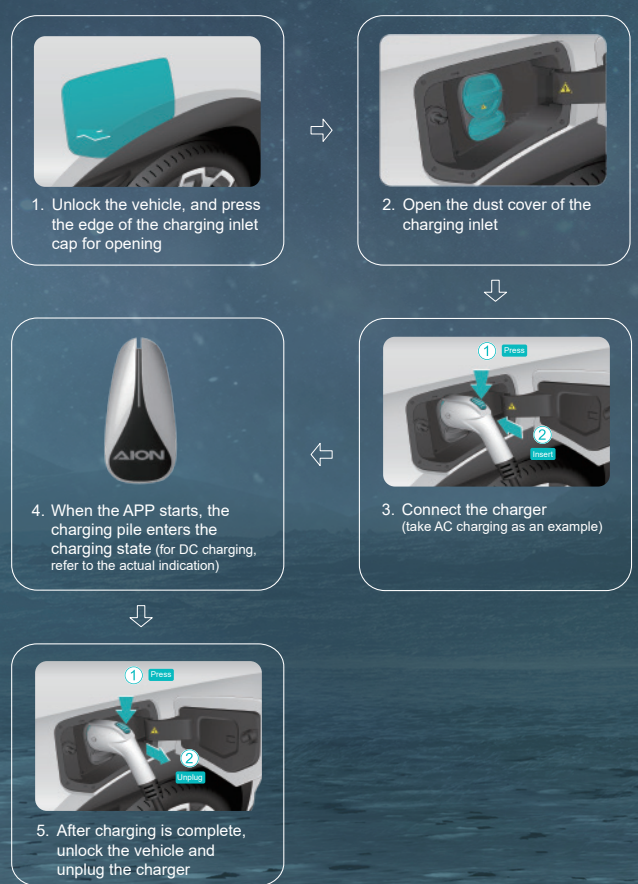

Emergency unlocking




- ◆ If the charger cannot be unlocked, manually unlock it by pulling the manual unlocking cable of the charger in the front cabin.



6. Charging reservation

◆ Observe the following steps to reserve for charging.

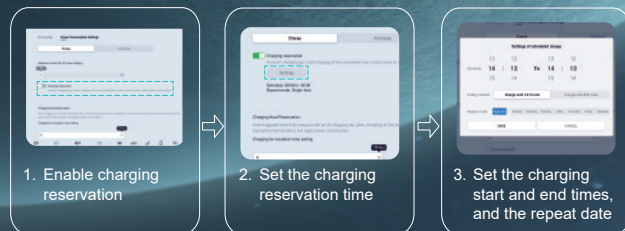

- ◆ Charging Reservation is only applicable to slow A/C charging.
- ◆ Set Charging Reservation more conveniently through the AION App.
- ◆ GAC AION charging piles are recommended for reservation for charging, as other charging piles may not support this function.

7. Emergency treatment

If the vehicle key is not functional, you can unlock the vehicle in an emergency using the following methods

Door unlocking with mechanical key

1. Extend the door handle
2. Unlock/lock the door



◆ Press the front side of the door handle in the direction of arrow A to uplift the rear side of the door handle.




◆ Insert and turn the mechanical key to unlock or lock the door.

Trunk emergency unlocking

1. Fold down the seat back
2. Unlock and open the liftgate



◆ Pull up the unlocking handle, and tilt the seat back forward.

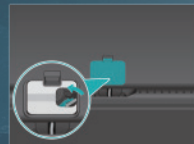

◆ Toggle the emergency unlocking switch.

Electric power system fault indicator lamp



◆ If the electric power system fault indicator lamp on the instrument cluster comes on, pull over and ask for advice by calling GAC AION's customer service hotline.

12V low voltage supply system fault warning lamp



◆ If the 12V low voltage supply system fault warning lamp on the instrument cluster lights up, you can call AION customer service hotline for assistance.



Second-Generation **AION V**

Quick Start Guide