

1. Know the vehicle

Unlocking and locking vehicle

Method 1: Intelligent active unlocking/locking

- ◆ Automatic unlocking when you approach the vehicle with the smart key
- ◆ Automatic locking when you leave the vehicle with the smart key

Method 3: Touch-sensitive unlocking/locking*



- ◆ Approach the vehicle with the smart key and touch the sensing recess on the front door handle to automatically unlock/lock the vehicle.

Opening the trunk

Method 1: Opening with the micro switch



Opening the charging port cover

Method 1: Opening by unlocking the vehicle



- ◆ After unlocking the vehicle, press the back edge of the charging port cover to automatically open the charging port cover.

Method 3: Opening by pressing the button on the smart key twice in succession

*: Applicable to some models


2. AION App

1. Scanning the QR code to download the App and register




AION App
(Thailand)


2. Binding the vehicle

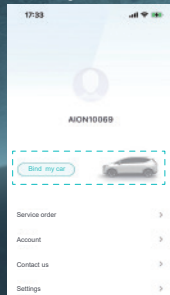

3. Owner authentication

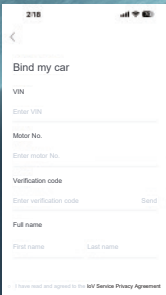


4. Setting PIN

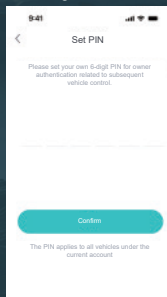


- ◆ Set a PIN to provide identity authentication for subsequent vehicle control

5. Vehicle control

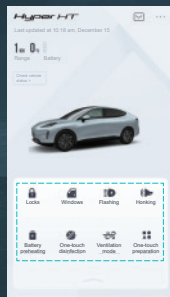


- ◆ Multiple vehicle control functions are available after identity authentication (specific functions are subject to actual conditions)

6. Checking vehicle status

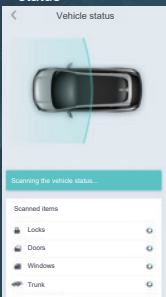


- ◆ After the detection, the current vehicle status can be displayed

7. A/C settings

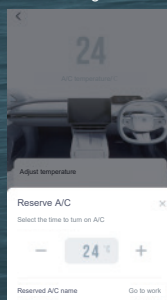

8. Charging management

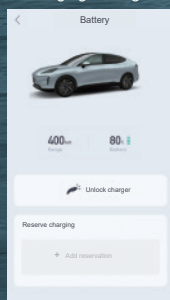

- ◆ The interface is for reference only, and the actual display shall prevail.

3. Driving modes

Introduction to driving modes

Driving mode	Explanation
COMFORT	The optimal combination of steering effort, acceleration response, and braking response for daily driving.
SPORT	With agile responses, the combination of steering effort, acceleration response, and braking response is more oriented toward driving pleasure.
ECO	One-pedal mode, where acceleration and deceleration are achieved by controlling the accelerator pedal. In this mode, the energy recovery rate is high and the range of vehicle can be significantly improved. This mode is especially suitable for urban driving.
PERSONALIZATION	You can set the steering force, acceleration response, braking response, and ESP by yourself.
ULTRA-ECO	With the ULTRA-ECO mode enabled, the vehicle runs at the lowest energy consumption rate, and the vehicle power and A/C will be restricted.

Switching driving modes



- ◆ When the traction battery is too low, you can turn on the ULTRA-ECO mode through the ULTRA-ECO mode reminder pop-up window on the center console display

- ◆ Enter the main interface of the center console display and switch between the COMFORT, SPORT, ECO and PERSONAL-IZATION modes

4. Intelligent driving assist

Setting Adaptive Cruise Control (ACC)

After the ACC is turned on, the system will detect the information of vehicle ahead, and activate cruise control (no vehicle ahead) or automatically follow the vehicle ahead (if any).



Setting steps:

1. With the gear in "D", move the column shifter in the "D" gear direction once to activate the ACC.
2. Scroll the roller on the steering wheel up or down to adjust the cruising speed
3. Toggle the roller on the steering wheel left or right to adjust the following distance

Setting Integrated Cruise Assist (ICA)

ICA can automatically follow the vehicle ahead during cruise control and keep the vehicle traveling in the middle of the lane.



Setting steps:


- With the gear in "D", move the column shifter in the "D" gear direction twice quickly to activate ICA.

- ◆ Only some intelligent driving functions are listed. Please refer to the Owner's Manual for other intelligent driving functions.
- ◆ Intelligent driving functions can only assist the driver in safe driving and are not applicable in all cases.
- ◆ The driver should always pay attention to the vehicle condition and driving environment, and cannot completely rely on the intelligent driving functions.
- ◆ The interface is for reference only, and the actual display shall prevail.


*: Applicable to some models

5. Vehicle charging

AC charging and DC charging

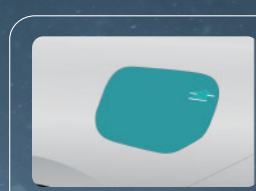

1. Unlock the vehicle and press the back edge of the charging port cover to open the charging port cover.

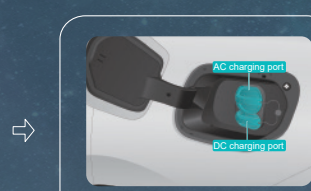


2. Open the charging port dust cap.




4. Start the charging pile through the App and enter the charging state (DC charging is subject to actual conditions)



5. Vehicle charging starts (Charging indicator lamp flashes green)

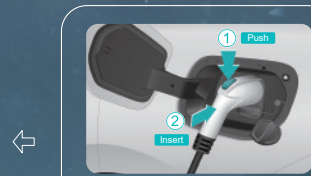

3. Connect the charger (Take AC charging as an example)

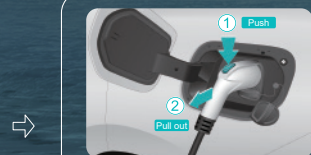

6. Unlock the vehicle and pull out the charger

Emergency unlocking





- ◆ When the charger cannot be unlocked, it can be unlocked by the charger manual unlocking cable on the left side of the trunk.



HyperHT-EN-202407

6. Reserving charging

◆ When reserve charging to your vehicle, please follow the steps below

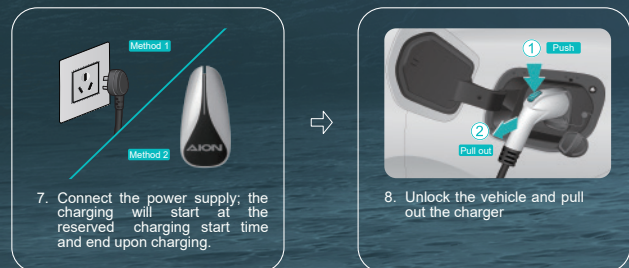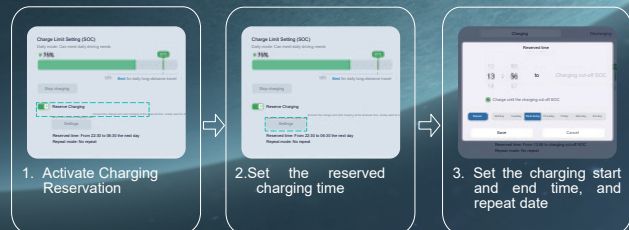

- ◆ Charging Reservation is only applicable to AC charging
- ◆ Charging Reservation can be set more conveniently through the AION App
- ◆ It is recommended to use an AION charging pile for charging reservation. Other charging piles available on the market may not support Charging Reservation.

7. Emergency treatment

When the smart key of the vehicle cannot be used, emergency unlocking can be achieved in the following ways

Door unlocking with the mechanical key

1. Extend the door handle
2. Unlock/lock the door



- ◆ Press the front side of the door handle in the direction of arrow A to uplift the rear side




- ◆ Insert and turn the emergency mechanical key to unlock or lock the door

Emergency unlocking of the trunk

1. Fold down the seat back
2. Unlock and open the trunk



- ◆ Pull the unlocking handle and pull the seat back forward.

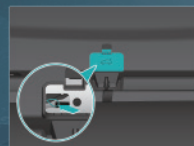

- ◆ Operate the emergency unlocking switch

Electric power system fault indicator lamp



- ◆ If the electric power system fault indicator lamp on the instrument cluster comes on, pull over and ask for advice by calling AION's customer service hotline.

12V low voltage power supply system fault warning lamp



- ◆ If the 12V low-voltage power supply system fault warning lamp on the instrument cluster comes on, please refer to the Owner's Manual to try jump starting, or call AION's customer service hotline for help.

8. Direct connection to the headquarters

400 customer service hotline

AION's customer service hotline

If you have any question, we will serve you wholeheartedly.

Your satisfaction with our products and services is our greatest gain!

* Applicable to some models



HYPTEC HT

Quick Start Guide